




More than you expect. Exactly what you need.

INSTALLATION INSTRUCTION

PRODUCT: CONTOUR, SIGNATURE SERIES & WOOD SLAT WALL BENCH
MANUAL: Z000000004

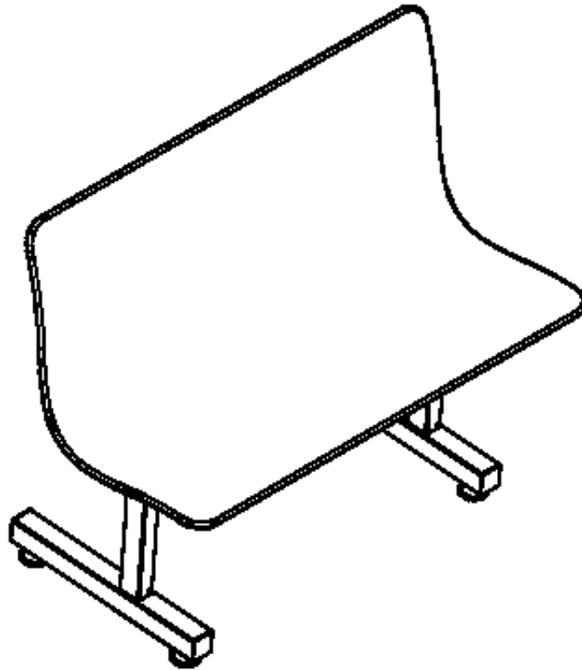

ATTENTION INSTALLERS: PLEASE PRESENT INSTALLATION DOCUMENTS TO FACILITIES MANAGER.


REVISION: C
DATE: 11/1/10

COMPONENT INDEX FOR ASSEMBLY


UNPACKING YOUR SHIPMENT

Unpack and identify each component in each box that you received. If your shipment is missing parts, or too many parts were shipped, please contact Plymold Seating. Phone 507-789-5111


COMPONENTS:

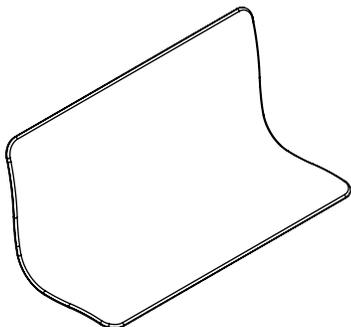


CONTOUR SEAT

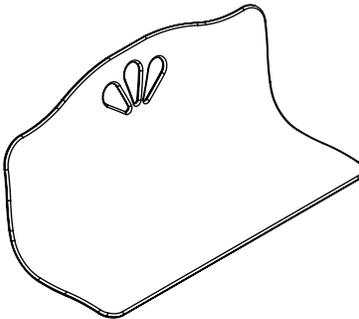


PEACOCK SIGNATURE
CONTOUR SEAT

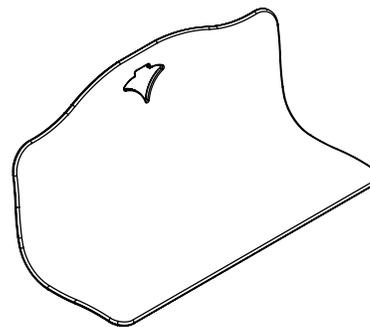


SPADE SIGNATURE
CONTOUR SEAT

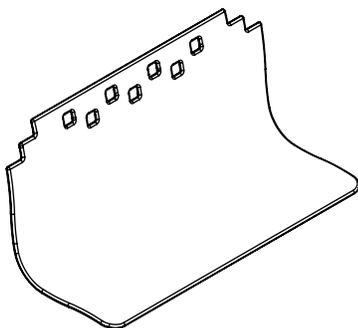

SQUARE SIGNATURE
CONTOUR SEAT

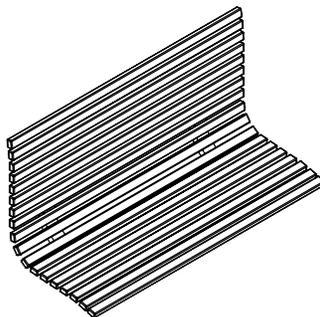


WOOD SLAT SEAT

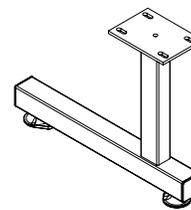


SOLO LEG

TOOLS REQUIRED:

SCREW GUN W#2 PHILLIPS BIT
SCREW DRIVER
TAPE MEASURE
PENCIL OR MARKER
WRENCH SET
9/16" SOCKET AND OPEN END WRENCH
1/4" MASONRY DRILL BIT
HAMMER DRILL

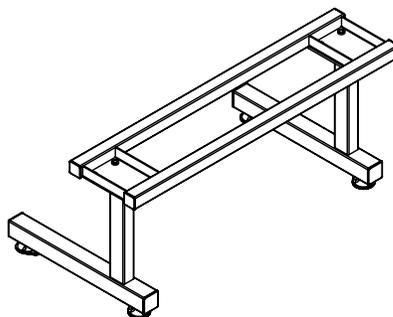


SOLO BENCH FRAME

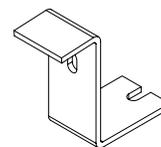

FRONT SEAT HOOK




REAR SEAT HOOK

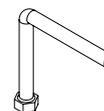

ELBOW BOLT



1/4-20UNC KEP NUT

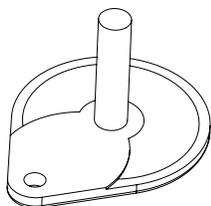

ADJUSTABLE
GLIDE



3/8-16 X 1"
BOLT



3/8-16UNC NUT
SLAT ONLY




FLOOR ANCHOR



#10X1.00"




STEP 1: GLIDE ASSEMBLY

1. Screw the thread in glide into the leg tube.

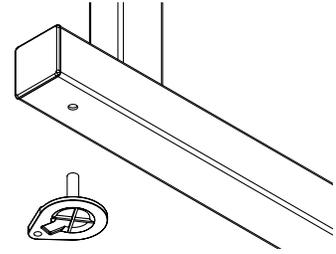

STEP 2: ASSEMBLING SEAT TO LEGS


1. Attach legs to frame using 3/8"-16 Hex Head bolts. (fig.1)
2. Tighten bolts using a wrench.
3. Fasten the frame to seat using front seat hook and elbow bolts (fig. 2). Finger tighten nuts.
4. Insert rear seat hooks, using a flat head screwdriver, pry rear seat hook over frame until it snaps in place (fig. 3).
5. Tighten elbow bolt nuts with wrench.

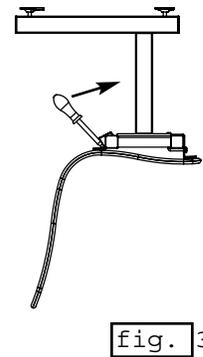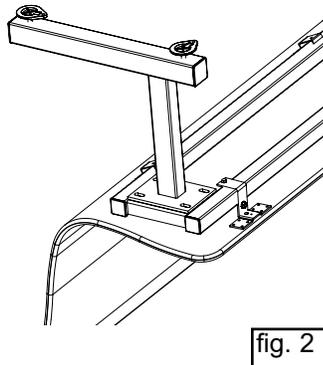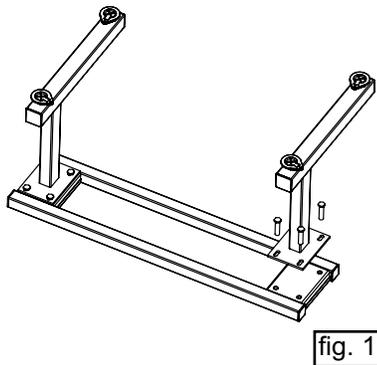

STEP #3 FASTENING GLIDES TO FLOOR

1. Rotate glides so that the mounting hole is pointing towards the center of the booth.
2. With a pencil, mark the hole location on the floor using the holes in the glide.
3. Turn the glide away 90 degrees from its current position to expose the mark on the floor.
4. Using a hammer drill and a 1/4" masonry bit, drill a 1 1/4" deep hole on the pencil mark.
5. Place a plastic anchor in the hole and then rotate glide back so its hole lines up with the plastic anchor in the floor.
6. Insert a #10 x 1.00" screw through the hole in the glide and secure into the plastic anchor.

NOTE: Frames must be anchored to the floor to maintain stability and prevent personal injury.

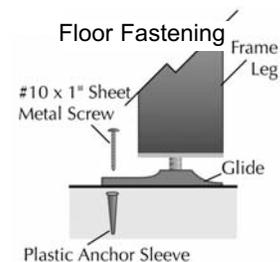

STEP #4: CARE

1. Clean furniture and protect unit ready for use.

CARE & CLEANING:

Day to day soil

Remove ordinary dirt and smudges with a mild soap and warm water solution. Rinse with a water dampened cloth. Dry with a soft cloth or towel.

Heavy soiling

Soiling can be removed with the following non-abrasive household cleaners and soft cloth.

- Formula 409 All-Purpose Spray Cleaner
- Fantastik Spray Cleaner
- Other similar household cleaners

Rinse cleaned area with water dampened cloth. Dry with a clean cloth or towel.

For more difficult stains

Dampen soft white cloth with a solution of (10%) household bleach and (90%) water. Rub gently. Rinse with water dampened cloth to remove bleach concentration.

Please Review Carefully

Should you desire to use other cleaning methods carefully try them in an inconspicuous area to determine potential damage to the material. Never use harsh solvents or cleaners which are intended for industrial applications. To clean stained or soiled areas, a soft white cloth is recommended. Avoid use of paper towels.

PRODUCT WARRANTY

Plymold warrants all products manufactured and/or marketed by Plymold to be free from defects in material and workmanship under normal usage and service for one (1) year from date of purchase unless extended warranties have been established for specific products. The customer assumes responsibility for normal wear and tear.

This Warranty Agreement excludes all products or component parts that, in the opinion of Plymold, have been subjected to negligent use, misuse, alteration, accident or improper installation. Plymold reserves the right to make design changes, improve design or change specifications at any time without any contingent obligation to owners of products previously sold.

Plymold shall not be held responsible by customer or potential customers for failure to perform any of the obligations of this Warranty Agreement if such failures are the result of circumstances of Force Majeure such as, but not limited to floods, earthquakes, transportation strikes, labor disputes with any outside suppliers, or any other conditions beyond the control of Plymold.



615 Centennial Drive Kenyon, MN 55946
Phone 507-789-5111, 800-PLYMOLD (759-6653) Fax: 507-789-8315
Email: seating@plymold.com www.plymold.com